
 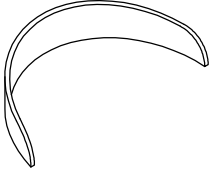




 

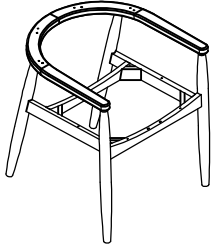



ITEM NAME/NOM D'ITEM: GOKA DINING CHAIR
ITEM #/NO. ITEM: 110497

PARTS LIST/LISTE DES PIÈCES


(1)	(2)	(4)
 x1	 x1	A.  M6 x 40MM x4 B.  1/4 x4 C.  8 x 30MM x4 D.  8 x 25MM x2 E.  5 x 32MM x6 F.  M4 x1
(3)		
 x1		

ASSEMBLY INSTRUCTIONS/INSTRUCTIONS D'ASSEMBLAGE


I.

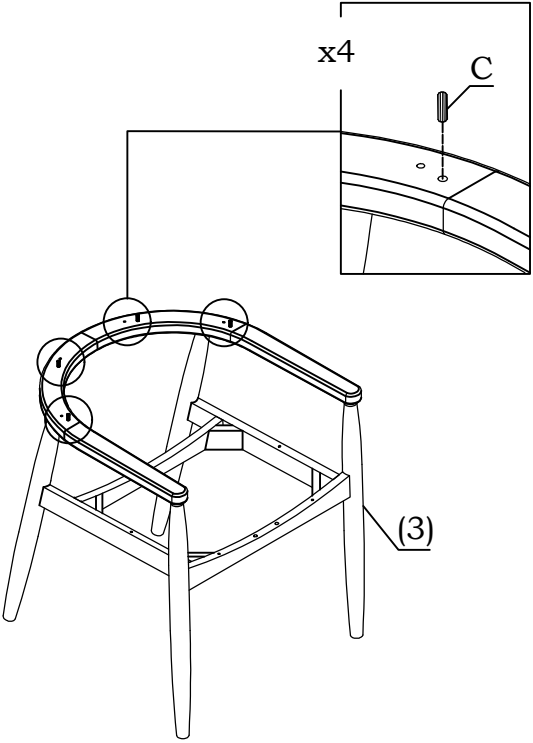


II.

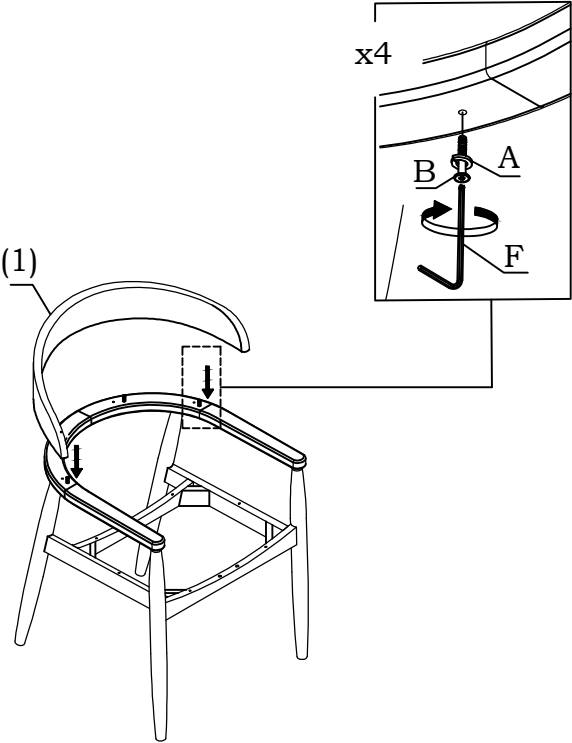


III.

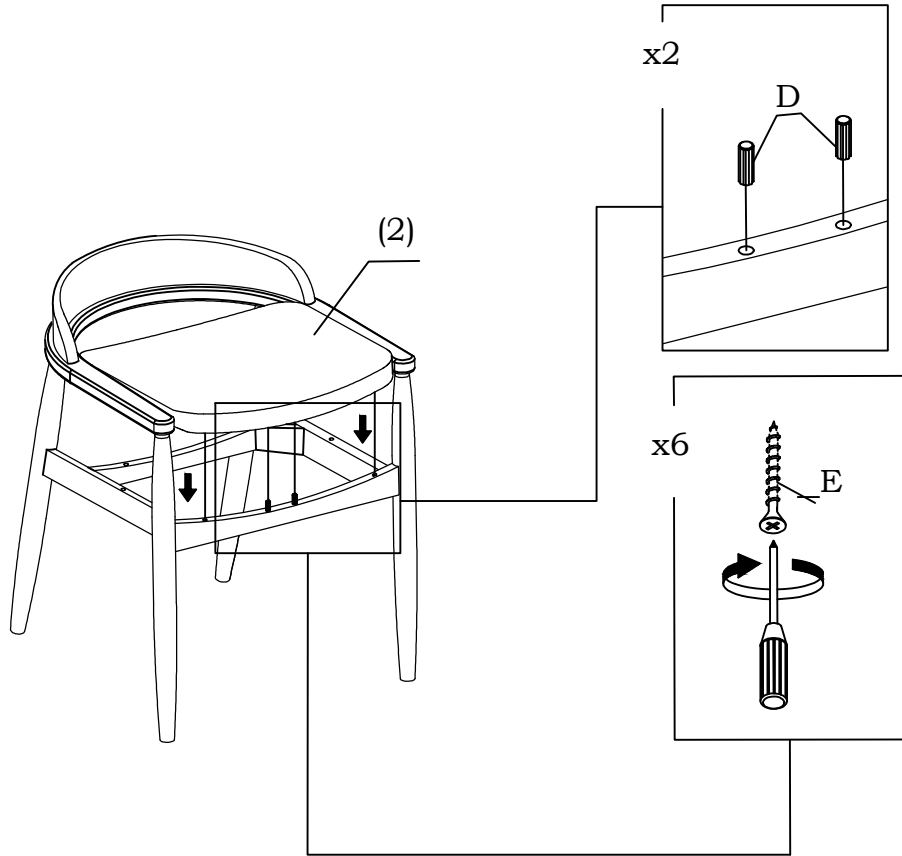

IV.

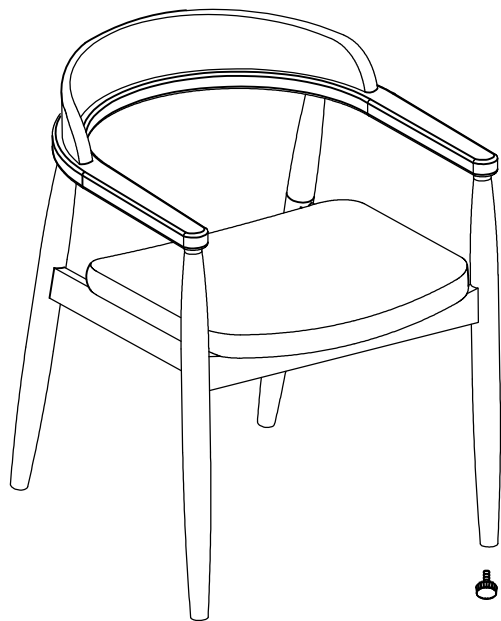

 Assembled

Please use the attached adjustable footglides to level the chair on an uneven surface.