
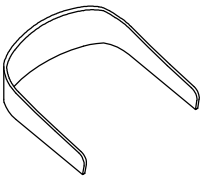


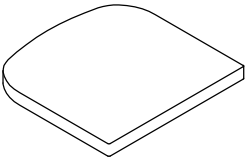


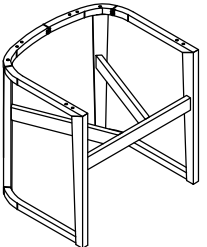



**ITEM NAME/NOM D'ITEM: ANASA DINING CHAIR**  
**ITEM #/NO. ITEM: 110499**

## PARTS LIST/LISTE DES PIÈCES


(1)	(2)	(4)
 x1	 x1	A.  M6 x 35MM x4 B.  1/4 C.  8 x 35MM x4 D.  5 x 32MM x6 E.  M4 x1
(3)		
 x1		

## ASSEMBLY INSTRUCTIONS/INSTRUCTIONS D'ASSEMBLAGE


I.

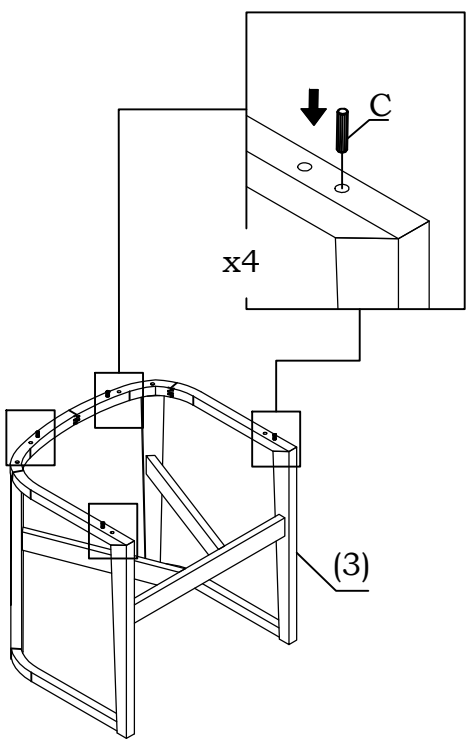


II.

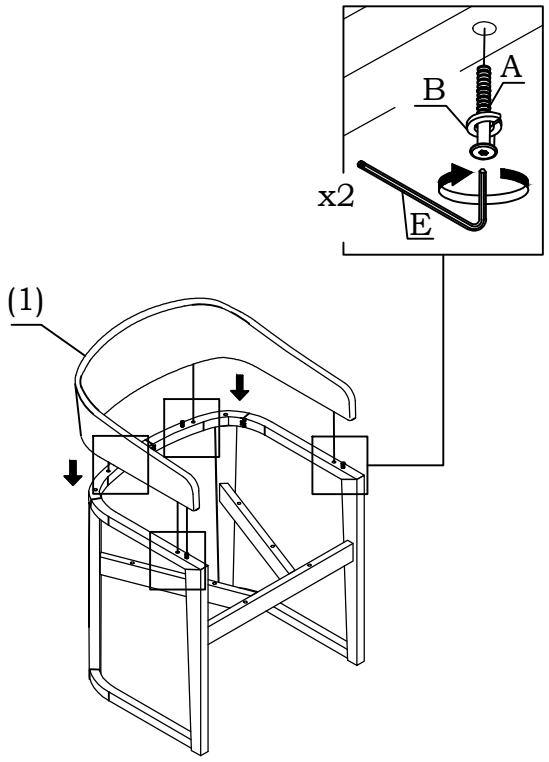

III.

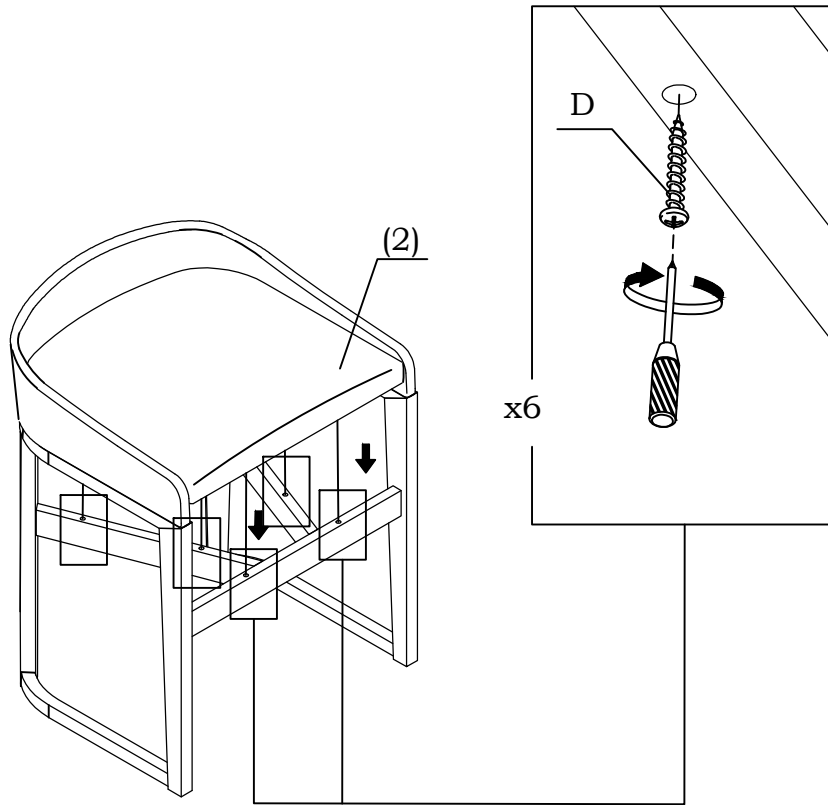

IV.

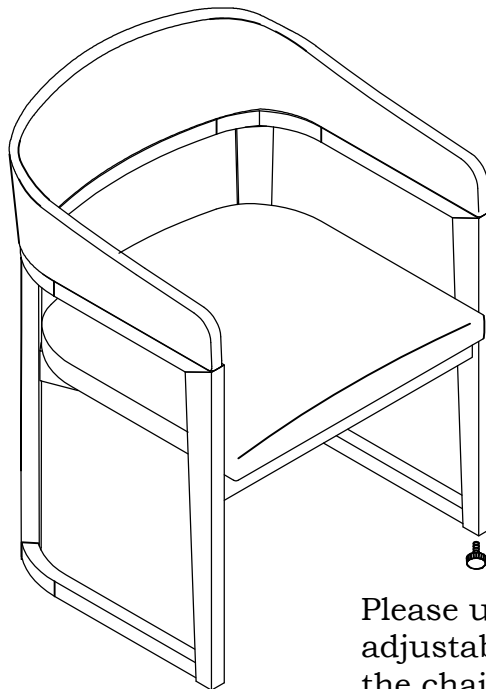

Assembled

Please use the attached adjustable footglides to level the chair on an uneven surface.